

Cine MP4-05

Plays: Audio & Video

For easy use we suggest that you create folders for different files (Pictures, Videos, Music, Other Files) Files will automatically be recognized by your MP4-05. This means that if you drag an audio file to your MP4 Player it will add it to its playlist.

USB 2.0 Connection

Mini SD Card

Compatible Files:

- Audio: MP3, WMA, WAV
- Video: MPEG-4 (AVI)

Battery Life: Max 3hrs of continuous play

Turn unit ON:

Push the slide to the ON side

Next hold Play for 5 seconds

Buttons:

Volume Down / Back out of a Sub-Menu (VOL-)

Volume Up / A-B (VOL+)

MODE (Push once to select an option/menu, hold down to exit to the main interface)

BACK (|<<)

FORWARD (>>|)

PLAY/PAUSE (PLAY)





Menu Options:



Music:

Push MODE to enter the menu.

Push MODE again to enter the Sub-Menu

Push MODE to select item



Video:

Push MODE to enter the menu.

Push MODE again to enter the Sub-Menu

Push MODE to select item



Photo:

Push MODE to enter the menu.

Push MODE to select item



Text:

Push MODE to enter the menu.

Push MODE to select item

Record:

Push MODE to enter the menu

Push PLAY to start recording

Push PLAY to pause recording




Record:

Push MODE to enter the menu

Push PLAY to start recording

Push PLAY to pause recording

Push MODE to save recording when ready

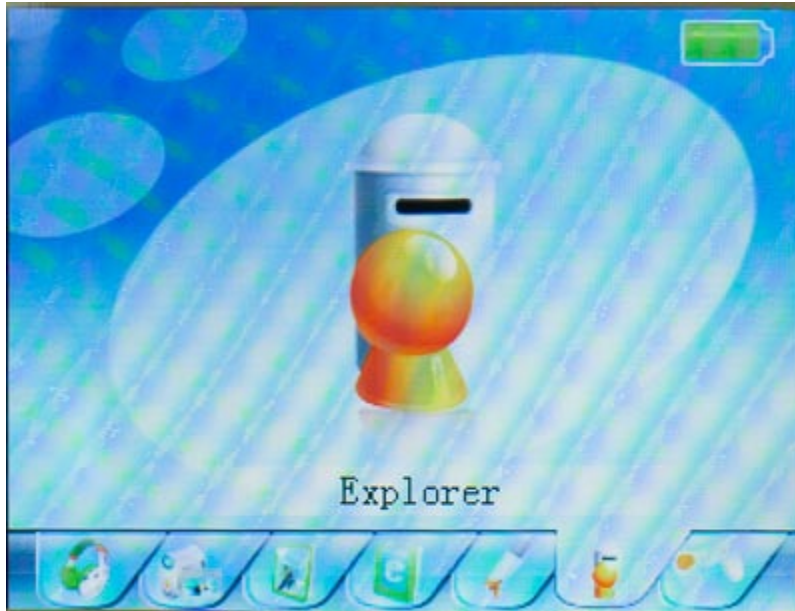

Explorer:

Push MODE to enter the menu.

Push MODE again to enter the Sub-Menu

Push MODE to select item



Game:

Push MODE to enter the menu

Push PLAY to start playing

Push PLAY to pause the game

- (|<< & >>|) will move your pieces Left or Right
 - (VOL+) will rotate your piece
 - (VOL-) will speed up its dropping speed
 - (MODE) will skip the dropping stage and automatically drop the piece in its current position
- Hold MODE to get out of the game and back to the main menu



Settings:

Push MODE to enter the menu

Use the (|<< & >>|) keys to move up or down

Use the (VOL-) key to back out of a Sub-Menu