

## Flick MP4-03

### **Plays:** Audio & Video

For easy use we suggest that you create folders for different file formats (Pictures, Videos, Music, Other Files)

Files will automatically be recognized by your MP4-03. This means that if you drag an audio file to your MP4 Player it will add it to its playlist.

USB 2.0 Connection

Mini SD Card

### **Compatible Files:**

- Audio: MP3, WMA, WAV
- Video: MPEG-4 (AVI)

**Battery Life:** Max 3hrs of continuous play

### **Turn unit ON:**

Push the slide to the ON side

Next hold Play for 5 seconds

### **DELETE FILE:**

Go to the desired file and push **REC**.

To confirm select Yes and push **MODE •**.

---

### **Buttons:**

**Volume Down (-)**

**Volume Up / (+)**

**MODE •** (Push once to select an option/menu, hold down to exit to the main interface)

**BACK /** Back out of a Sub-Menu (<<)

**FORWARD (>>)**

**PLAY/PAUSE (PLAY)**

**REC / A – B (REC)**



\*\*\*HP = Headphones / Earbuds

### Menu Options:



### Music:

Push MODE to enter the menu.

Push MODE again to enter the Sub-Menu

Push MODE to select item



**Video:**

Push MODE to enter the menu.

Push MODE again to enter the Sub-Menu

Push MODE to select item



**Photo:**

Push MODE to enter the menu.

Push MODE to select item



**Text:**

Push MODE to enter the menu.

Push MODE to select item




**Record:**

Push MODE to enter the menu

Push REC to start recording

Push REC to pause recording

Push REC or MODE to save recording when ready

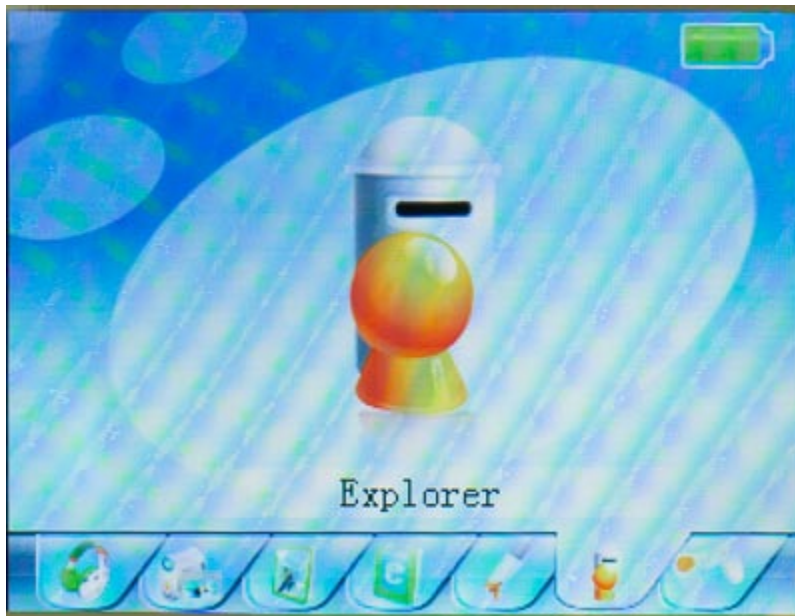

**Explorer:**

Push MODE to enter the menu.

Push MODE again to enter the Sub-Menu

Push MODE to select item



**Game:**

Push MODE to enter the menu

Push PLAY to start playing

Push PLAY to pause the game

- (<< & >>) will move your pieces Left or Right
- (+) will rotate your piece

- (-) will speed up its dropping speed
  - (MODE) will skip the dropping stage and automatically drop the piece in its current position
- Hold MODE to get out of the game and back to the main menu



**Settings:**

Push MODE to enter the menu

Use the (+, -) keys to move up or down

Use the (<<) key to back out of a Sub-Menu